# Installation Guide

Guía de instalación | Guide d'installation | Installationsanleitung | Guida all'installazione | 取り付けガイド | 安装指南 | 安裝指南

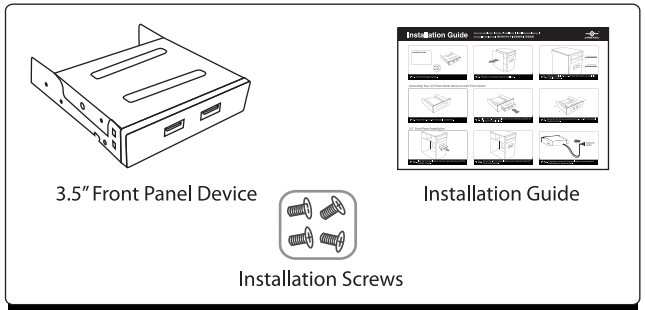


1. Verify the package contents.

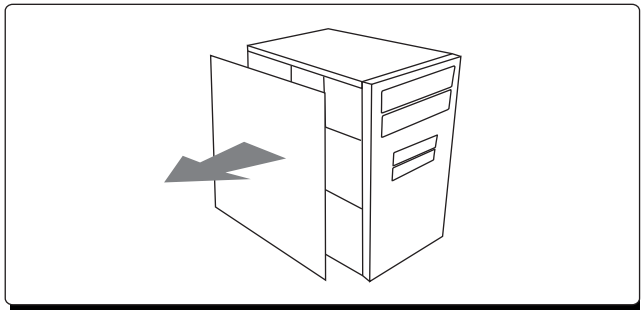

2. Prepare your computer case for installation.

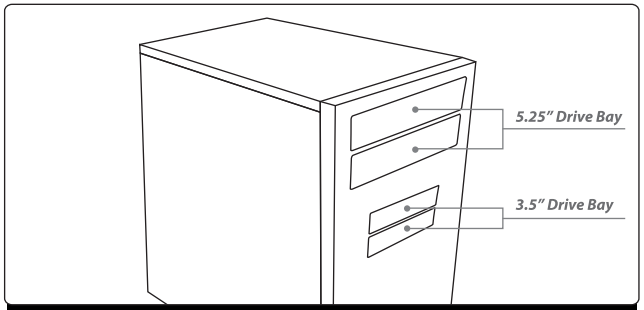


3. Locate an available 3.5" or 5.25" drive bay where you would like to install the device.

## *3.5" Front Panel Installation*

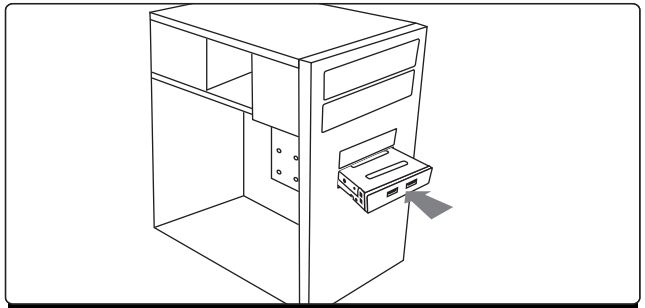

1a. Slide the front panel device into your case until the front panel is flush with the front of your case.

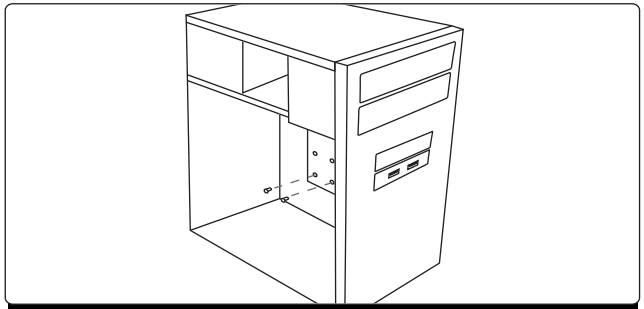

2a. Secure the 3.5" front panel device to your computer case with the provided screws.

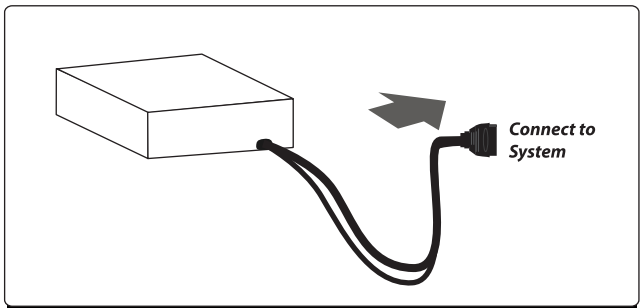


3a. Proceed to connect the front panel device to your system's motherboard or expansion card.

## *5.25" Front Panel Installation*

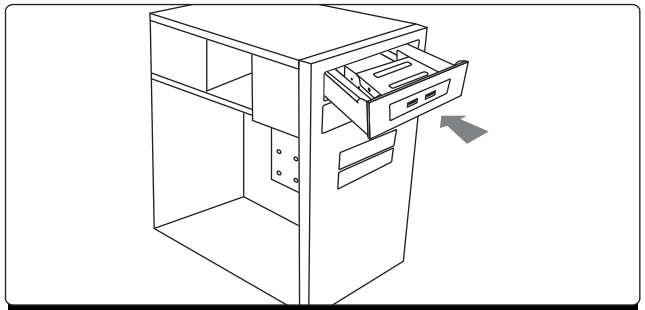

1b. Slide the front panel device into your case until the front panel is flush with the front of your case.

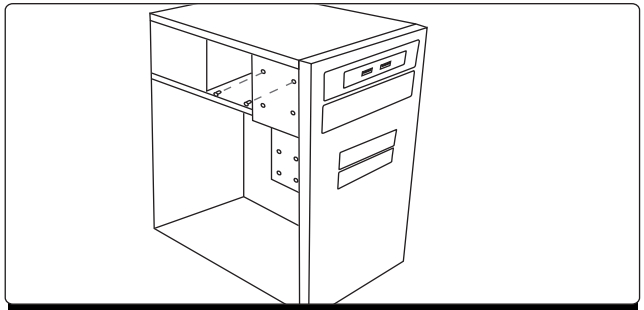

2b. Secure the 5.25" front panel device to your computer case with the provided screws.

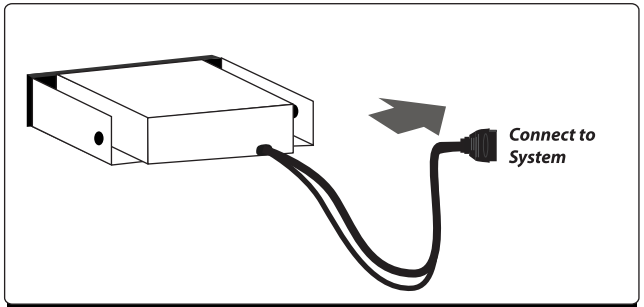


3b. Proceed to connect the front panel device to your system's motherboard or expansion card.

## Connecting Your Front Panel Device

**SATA and SATA Power Connector**

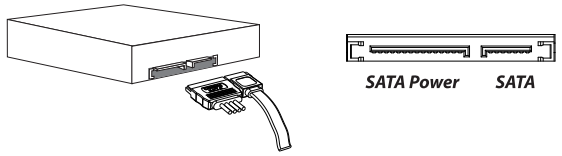


**20-Pin USB 3.0 or 9-pin USB 2.0**

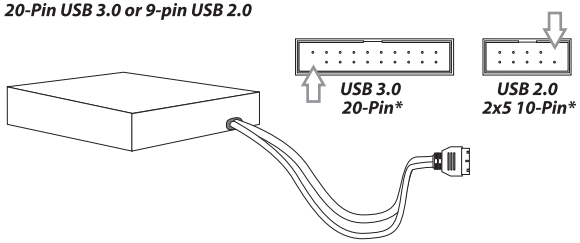


**Molex Power (4-Pin Peripheral)**

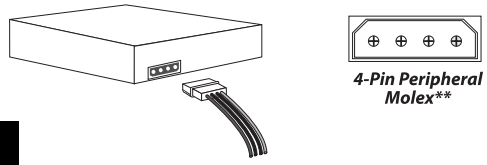


4.

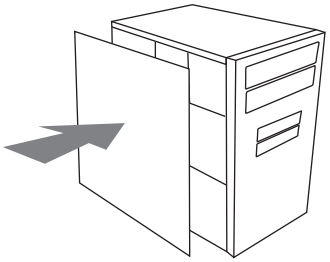

5. Make sure all connection are connected well and place the cover back on to your case.

6. Drivers will be automatically detected and installed. Your device will be ready for use.

* Diagram shown is the USB 3.0 20-Pin or USB 2.0 10-Pin found on supported motherboards or expansion cards. Please refer to your motherboard manufacturer's documentation for the location of these ports.

** Please make sure that the connectors are oriented properly before connecting. Incorrect orientation may cause severe damage to your device or electrical shock.

## Converting Your 3.5" Front Panel Device to 5.25" Form Factor

If you would like to mount your 3.5" device into your 5.25" drive bay, you may do so by using Vantec's HDA-525P 3.5" to 5.25" bay converters. Follow the steps below to convert your device form factor to 5.25".

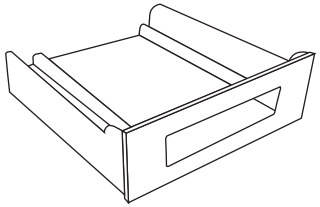

1. Prepare the 3.5" to 5.25" front panel converter kit.

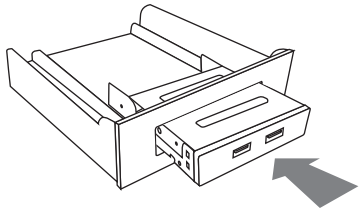

2. Slide in the 3.5" front panel device into the front bay converter kit until the front panel is flush.

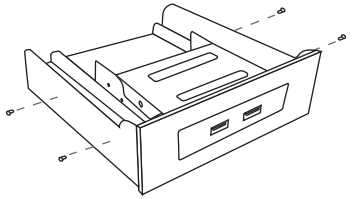

3. Secure with the screws provided by the 3.5" to 5.25" front panel converter bracket.

Information in this document is subject to change without notice.
Reproduction of these materials in any manner whatsoever without written permission is strictly forbidden.

Printed in China
Printed on Recycled Paper.

v1.01

www.vantecusa.com

Copyright © 2012 Vantec Thermal Technologies. All Right Reserved. | All Registered Trademarks Belong To Their Respective Companies.